

- A** 53-62 Steel Cup on Spare Tire Cover
Zinc plated with 3 authentic screws to mount to the plywood tire cover. 7632106 16.75
- 56-62 Spare Tire Mounting Bolt 7632155 22.50
- Spare Plywood Covers all are UPS Oversize O/S
- B** 56-60 Spare Tire Cover O/S 7632109 40.00
- C** 61-62 Spare Tire Cover O/S 7632110 40.00
- D** 53-60 Jacking Instruction Label *Illustrated below.*
glues to the spare tire cover. 8999250 4.25

JACK INSTRUCTIONS

1 Set parking brake, move selector lever to park position, and block diagonally opposite wheel.

2 For removing front wheels, place jack underneath lower support arm near outer end. Rotate handle clockwise to raise and counterclockwise to lower.

3 For rear wheels place jack underneath rear axle housing near rear axle rebound strap.

CAUTIONS:
Do not get underneath car when it is on jack.

POSITION OF JACK FOR REAR TIRE CHANGE

POSITION OF JACK FOR FRONT TIRE CHANGE

- E** 61-62 Jacking Instruction Label
glues to the spare tire cover. 8999251 4.25
- F** 56-62 Tire Cover Cushion 3 Piece Set
Die cut Black sponge rubber with pressure sensitive adhesive backing for easy installation. Prevents the jack from rattling. **Does 1 car.** 7632111 5.45
- G** 61-62 Trunk Access Plate 2 req 1224835 9.75
- H** Plate Mounting Screw 4 Piece Set 1224838 2.00
- I** 61-62 Trunk Lid Drip Rail Drain Hoses Pair
Authentic oddball size hose, empties rain water from the trunk lid lip on the body. 1224841 7.00
- J** 61-62 Drain Hose Nipples Pair 1224842 10.50
- 61-62 Drain Hose Grommets Pair 1224840 9.75
- K** 61-62 Gray Tail Lamp Cone 4 Piece Set
Protects tail lamp sockets from being damaged by objects in the trunk. 2660123 36.00
- L** 53-62 Spare Tire Frame Nut & Plate
Mounts on underbody to accept spare tire mounting bolt. Zinc plated. 7632107 8.25
- M** 53-62 Frame Nut Seal on the Underbody
Sponge rubber prevents pebbles from clogging threads of the frame nut. 7632108 2.95
- N** 61-62 Trunk Lid Pop-Up Spring
Authentic tapered coil compression spring supplied in white primer, paint to match trunk color. Crimp the narrow end to closed to securely grip the trunk rubber bumper. 1224837 5.50
- 61-62 Trunk Spring Rubber Bumper
Mounts in the top of the spring.
- O** Wide Thin Rubber Bumper 1224836 3.50
- OO** Narrow Thick Rubber Bumper 1224832 3.00

- N+O** 61-62 Bumper & Spring 1224834 9.00
- N+OO** 61-62 Bumper & Spring 1224833 9.00
- P** 61-62 Pop-Up Spring Mounting Clip
Includes mounting screw. 1224839 9.75
- Q** 61-62 Jack Handle Anti-Rattle Pad 3 Piece Set
Die cut Black sponge rubber with pressure sensitive adhesive backing for easy mounting in the recesses of the trunk. Prevents jack handle & tire iron from rattling. **Does 1 car.** 8820117 3.50

Trunk Weatherstrip

R 53-58 Solid Profile Trunk Weatherstrip 1224805 19.50

S 59-62 Tubular Profile Trunk Weatherstrip 1224806 17.75

Quality extruded Black closed cell sponge rubber with the authentic profile.

Trunk Cardboard Liners

T 56-60 Flat Trunk Liner in Red O/S 1224821 85.00
in Black O/S 1224822 85.00

U 61-62 Flat Trunk Liner in Red O/S 1224820 85.00
in Black O/S 1224823 85.00

Die Cut Fiber Trunk Liners: all are UPS O/S

- 56-62 Trunk Liner with Power Top Bulge *Specify Color and Model Year O/S* 1224825 120.00
- T** 56-60 Flat Trunk Liner in Red O/S 1224821 85.00
in Black O/S 1224822 85.00
- U** 61-62 Flat Trunk Liner in Red O/S 1224820 85.00
in Black O/S 1224823 85.00


Trunk Liner Mounting Hardware. **Does 1 car.**

- 58-62 "S" Mounting Clip 4 Piece Set 1224824 8.00
- 56-62 Liner Mounting Screw 7 Pieces 1224819 3.25


Trunk Mats

Our Heavy Weight Rubber Mats have the proper Contours Authentic Rib Patterns, Borders & Molded in OEM Part Numbers. Made in the USA. You may find cheaper mats for your Vette, but they are better suited to your "Bath Tub"


- 53-55 Trunk Mat**
- | | | | |
|-------------|--------------|---------|--------|
| 53 Red | OEM #4636966 | 1224874 | 239.00 |
| 54-55 Red | OEM #4645541 | 1224875 | 239.00 |
| 54-55 Beige | OEM #4647685 | 1224876 | 239.00 |
| 54-55 Black | OEM #3723065 | 1224877 | 239.00 |
- V 56-57 Trunk Mat**
- | | | | |
|-------------|--------------|---------|--------|
| 56-57 Red | OEM #3723710 | 1224880 | 239.00 |
| 56-57 Black | OEM #3725404 | 1224881 | 239.00 |
- V 58 Trunk Mat**
- | | | | |
|--------------|--------------|---------|--------|
| 58 Red | OEM #3743427 | 1224882 | 239.00 |
| 58 Charcoal | OEM #3743428 | 1224883 | 239.00 |
| 58 Blue Gray | OEM #3743429 | 1224884 | 249.00 |
- ? 56-Early 60 Mats have a curved cut out on the LH side of the mat adjacent to the cardboard liner. This cut out was for the bulge produced by the power top mechanism, and was present even if no power top was installed. Late 60 Mats are straight across the back.

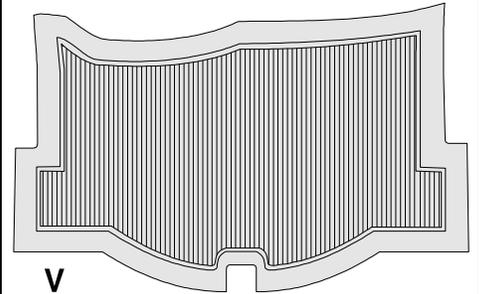

- V 59-Early 60 Trunk Mat**
- | | | | |
|------------|--------------|---------|--------|
| Red | OEM #3761486 | 1224885 | 239.00 |
| Black | OEM #3761394 | 1224886 | 239.00 |
| Frost Blue | OEM #3761494 | 1224887 | 249.00 |
| Turquoise | OEM #3761510 | 1224888 | 269.00 |

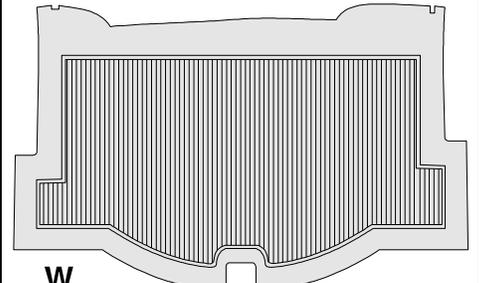

- W Late 60 Trunk Mats**
- | | | | |
|--------------------|--------------|---------|--------|
| Late 60 Red | OEM #3777517 | 1224889 | 239.00 |
| Late 60 Black | OEM #3777513 | 1224890 | 239.00 |
| Late 60 Frost Blue | OEM #3777516 | 1224891 | 0.00 |
| Late 60 Turquoise | OEM #3777518 | 1224892 | 0.00 |

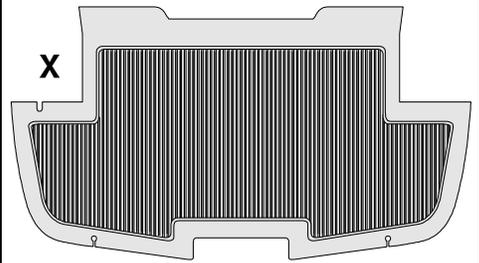

- X 61-62 Trunk Mat**
- | | | | |
|------------------|--------------|---------|--------|
| 61 Jewel Blue | OEM #3783834 | 1224897 | 239.00 |
| 61-62 Black | OEM #3782772 | 1224894 | 239.00 |
| 61-62 Red | OEM #3783835 | 1224895 | 239.00 |
| 61-62 Fawn Beige | OEM #3783837 | 1224898 | 239.00 |